

# PURE<sup>®</sup>

## T H E A T R E




Installation Video

## Fixed Frame Screen

### User Guide


© 2025 PureTheatre | Version 8

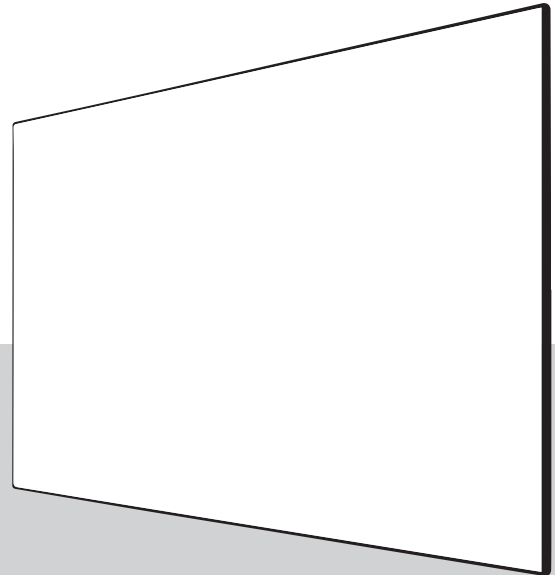

## Warning



This product may contain sharp edges, please handle with care.  
Protective gloves are recommended

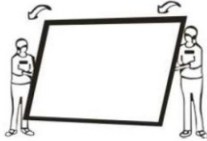

A minimum of two people are needed to assemble and install the screen.



Assembling this product requires a flat surface which is free of obstacles and sharp objects. We highly recommend you supply your own floor cloth in addition to ours to protect the screen during assembly and installation.

## Q&A

### 1. I am missing parts from my package.

Solution: The Tensioning Rods may be stored inside the roll of Screen Fabric. Check if your missing parts are already pre-installed onto the screen. If you still have parts missing, contact customer support.

### 2. My screen fabric is damaged when I open the package.

Solution: In case of damaged or defective product, please contact customer support **before** assembly and installation.

### 3. It is very difficult to pull the springs.

Solution: Make sure you are using the correct method. Seek assistance if needed. Incorrect installation may risk damaging the screen.

### 4. I see the sleeve of the fabric shown over the Cover of the screen after I fully assembled it.

Solution: The Covers have to be dismantled and then repeat steps 4-5. Make sure the screen fabric is not shifted, and you evenly distribute the fabric across the frame. Inspect the screen fabric before installing the Covers.

#### **5. I see wrinkles and lines on the screen projection surface.**

Solution: If you just installed this screen, and you see lines or wrinkles on the screen surface, do not panic! The screen material is a flexible projection material and depending on how the screen material is handled or installed, the screen may have wrinkles. With proper adjustments they will disappear. Check the tension of the screen material, and smooth out the material evenly along the side of the Tensioning Rod holding the screen. Go through step 4.6 and make sure there is sufficient tension on the screen. If done properly, you should have very few to no wrinkles on the screen. Consider leaving your screen in a warm environment for up to few weeks which will allow the fabric to relax and flatten itself overtime. Install the screen on the wall properly before doing so, do not lean the screen against other objects or leaving it on the ground. If you still have wrinkles over a few weeks or if you have any concerns, consider contacting customer support.

#### **6. The corners of the screen material are wrinkled.**

Solution: This is a common assembly error when the frame is pressed against the material when installing on the ground. You can easily eliminate the wrinkles by using the flaps at the corners of the screen material. Go back to step 4.4, take out the outer frame, then tension the corners. You do not need a lot of tension to make the corners flat. Lift the screen from the ground and put the outer frame onto the screen. Make sure to give the outer frame enough clearance off the ground until it is in place.

## General Notes

Please handle the screen with care to keep it in good condition for many years to come.

1. Do not touch the fabric surface by hand or with hard objects. Doing so may cause scratches on the projection material.
2. Do not fold the screen fabric. This will cause there to be creases in the material.
3. Do not scratch or write on the screen.
4. Do not put sharp objects on or underneath the screen during assembly or maintenance. This can damage the screen material.
5. Do not attempt to assemble or disassemble using methods not mentioned in this guide.
6. Do not clean the screen fabric with corrosive or abrasive detergent.
7. When mounting and dismounting the screen, people are needed. Do not stand underneath the screen when it is being mounted or hanging.
8. Keep any spare parts and this instruction manual where they can accessed if needed. Keep out of reach of small children.
9. Make sure the mounting hardware is strong enough to support the weight of the screen and is suitable for the wall it is being installed on.

# Parts Checklist

The following items will be included in the Accessories box:



Tensioning Springs



Wall Brackets




Fixings



Pozi screwdriver




Clamp Springs

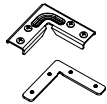

Inner frame corner bracket  
Outer frame corner bracket



Spring Hook Tools

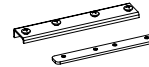

Inner frame connecting bar  
Outer frame connecting bar




Support Bar(s)

Inner Frame Connecting Bars (Black)



Outer Frame Connecting Bars (Silver)



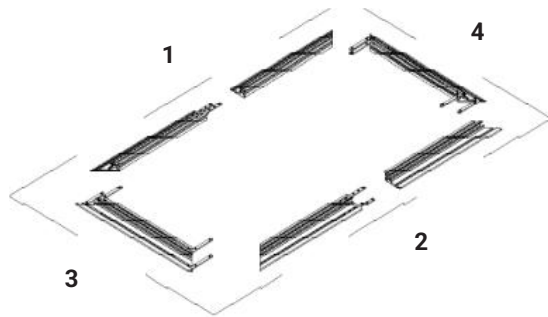

Outer Frame  
(Front Cover)



Inner Frame


Inner frame and Outer frame (front cover) sections.  
8-12pcs



Tensioning Rods  
4-6pcs

## Step 1 : Clean the floor and check the package

Note: The floor must be cleaned and without any hard objects to avoid screen damage.

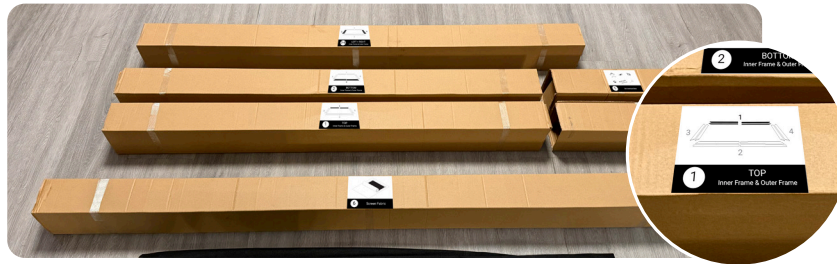

Labels indicate the contents : frame/fabric

## Step 2: Assemble Inner Frame (Right and Left Sides)

Open the package and place the inner frame pieces onto a clean surface



*(\*Ensure surface is free of debris)*

Insert the corner brackets into four corners. (Flat side up)



Align the holes and install the screws (Don't turn the screws too tight in this step)



## Step 3: Join Inner Frame (Right and Left Sides - Including Connecting Bars on larger screens)

Insert the connecting bar into one half of the frame



Align the connecting bars with the holes in the left frame and tighten screws



Slide the right frame into the connecting bars and tighten screws





## Step 4 : Align Inner Frame and Fit Fabric



Align the inner frame corners, Hold tightly and then tighten the screws. Then position the support bars and tighten the screws.



Assembly of inner frame is now complete. Put to one side and prepare the fabric.

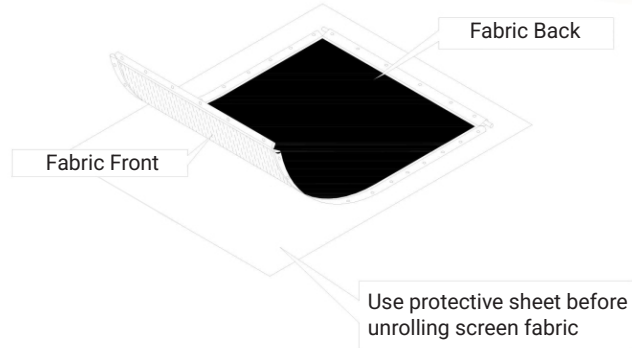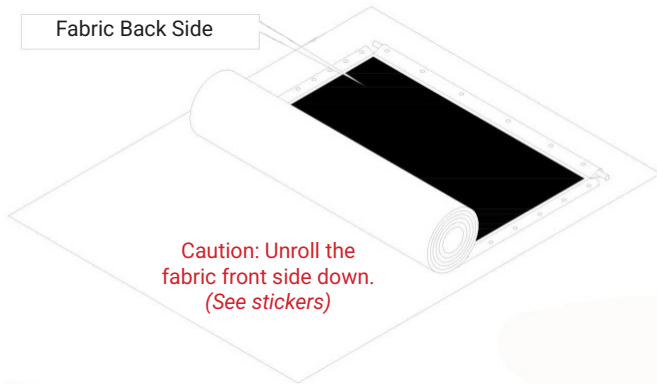



Put the protective sheet on the floor and lay out the screen fabric on top - viewable surface down.  
*(If black backing fabric is supplied, place over the screen fabric prior to fitting the frame)*



Put the assembled inner frame on to the fabric and carefully align the four corners equally.



Insert the Tensioning Rods into the four sides of the fabric.



Install the tensioning springs with two people at the same time, using the hook tools, carefully maintaining alignment.

1. Hook the springs in the middle of the frame - Top and Bottom
2. Then hook the springs in the four corners maintaining alignment
3. Continue installing springs from the middle working outwards

*(Check if there are any wrinkles and adjust the springs if necessary)*

## Step 5: Install the outer frame (Front Cover)



5.1 Lay the screen face down and place the outer frame pieces around the outside edge.



5.2 Install the small screws into the 4 x corner brackets. Then insert corner brackets into the Right and Left outer frame sections.



5.3 Connect Top Outer Frame & Bottom Outer Frame pieces together. To do this install the small screws into the silver connecting bars.



5.4 Align connecting bar half way into the Left Outer Frame and tighten the screws.



5.5 Slide the Right Outer Frame into the silver connecting bar and tighten screws.



Install the Top and Bottom Outer Frame sections pressing them together onto the inner frame until you hear a “click”.




Install the Right/Left Outer Frame sections pressing them together with the brackets aligned onto the inner frame until you hear a “click”



Carefully align the outer frame corners and then tighten the small screws on all four corner brackets.

Check the corner alignment and adjust where necessary.

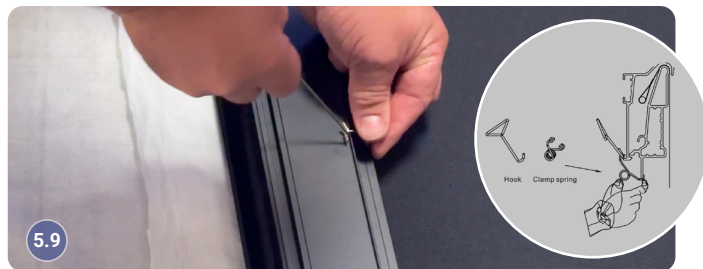


Insert the outer frame clamp springs on either side of the frame joints. Fasten one end of the clamp spring to the internal frame by hand and hold it steady. Pull the other end of the clamp spring with the hook and fasten it to the outer frame.

## Step 6: Fixing to the wall

*(Please note: Plasterboard is not strong enough to support the screen. We recommend locating battens/studs and fixing to these.)*



Carefully measure the correct position for your brackets ensuring they are level

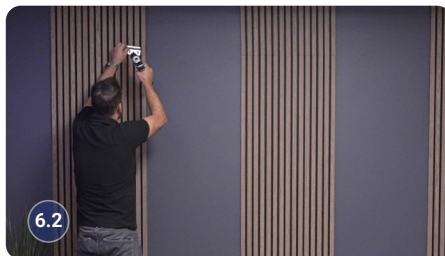

Carefully mark the location and drill holes for your brackets



Install the wall mount brackets ensuring they are strong enough to support the weight of the screen





Lift the screen up beyond the brackets and then move down slowly until the screen is mounted on the brackets.

Check if the screen is level and adjust brackets where necessary, then adjust the position left and right to achieve the desired position.

### Lower Wall Brackets (Optional)

For screens 150" or larger please install the lower wall brackets to secure.

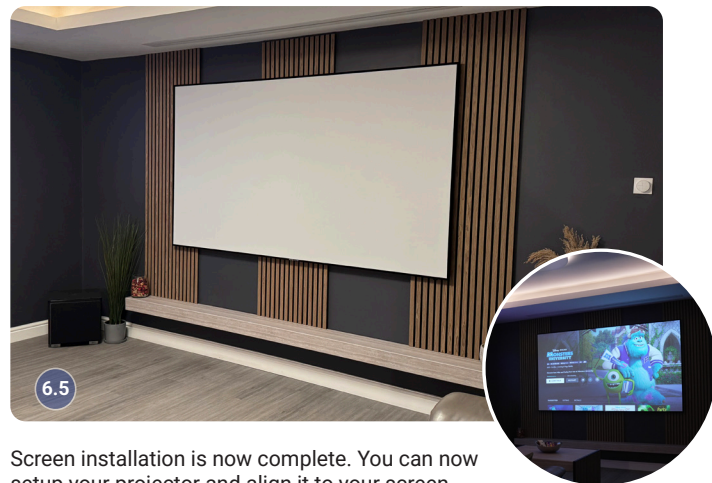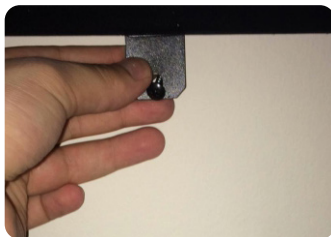

Screen installation is now complete. You can now setup your projector and align it to your screen.



Scan for Installation Video

[puretheatre.com](http://puretheatre.com)